





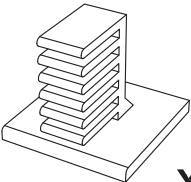


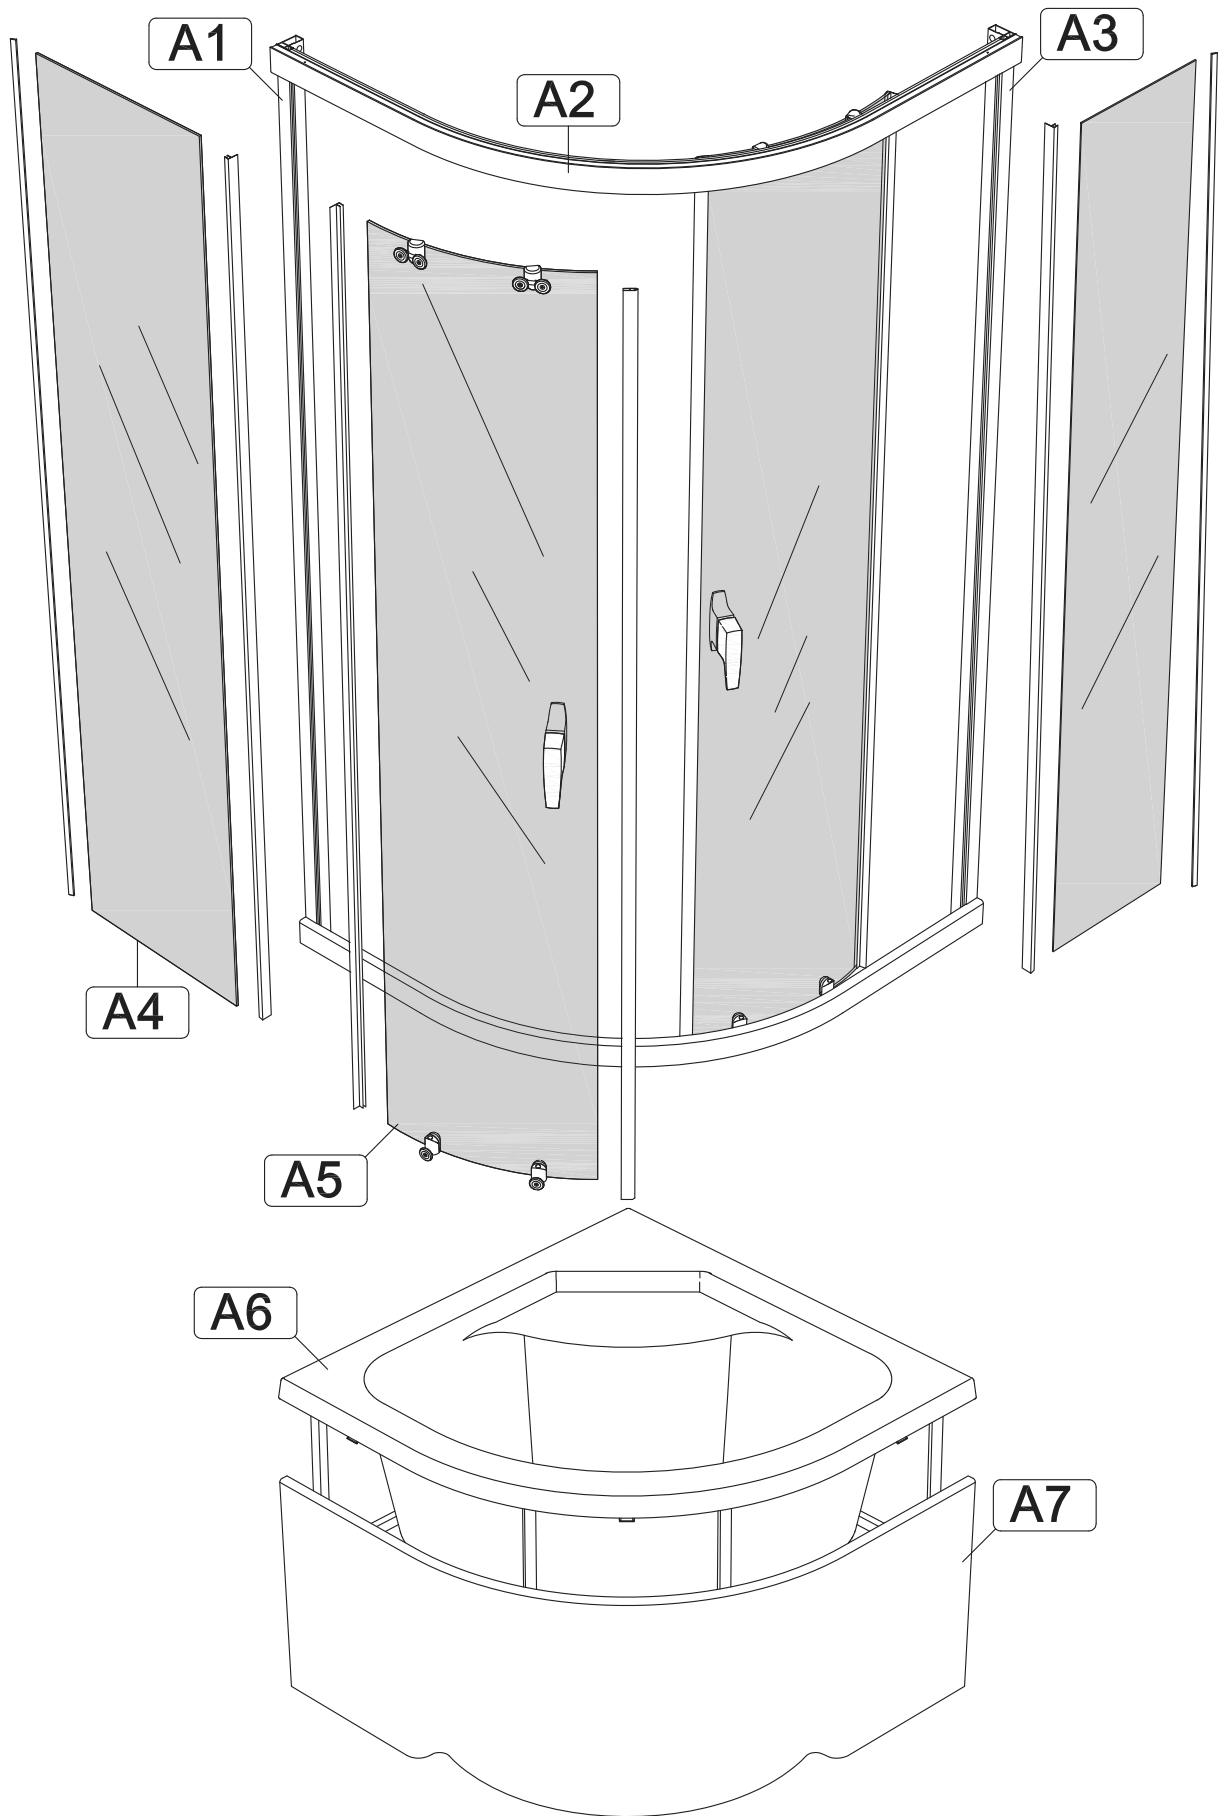








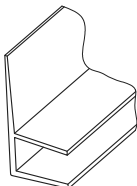





# ВИРГО


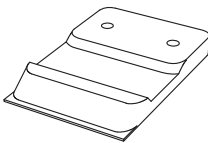
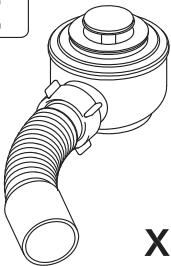





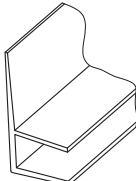
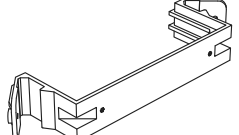
Инструкция по сборке  
душевой кабины





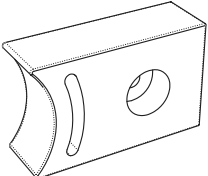
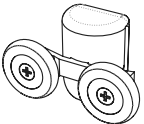


|   |   |  |   |   |
|---|---|--|---|---|
|   |   | <b>B1</b><br><br>x3         | <b>B2</b><br><br>x1        | <b>B3</b><br><br>x2        |
| <b>B4</b><br><br>x2      | <b>B5</b> 3.5x50<br><br>x2 | <b>B6</b> 3.5x19<br><br>x10 | <b>B7</b> 3.5x19<br><br>x6 | <b>B8</b> 3.5x12<br><br>x8 |
| <b>B9</b> 6x50<br><br>x2 | <b>B10</b><br><br>x10      | <b>B11</b><br><br>x4        | <b>B12</b><br><br>x4       | <b>B13</b><br><br>x4       |
| <b>B14</b><br><br>x4     | <b>B15</b><br><br>x2       | <b>B16</b><br><br>x4        | <b>B17</b><br><br>x2       | <b>B18</b><br><br>x2       |

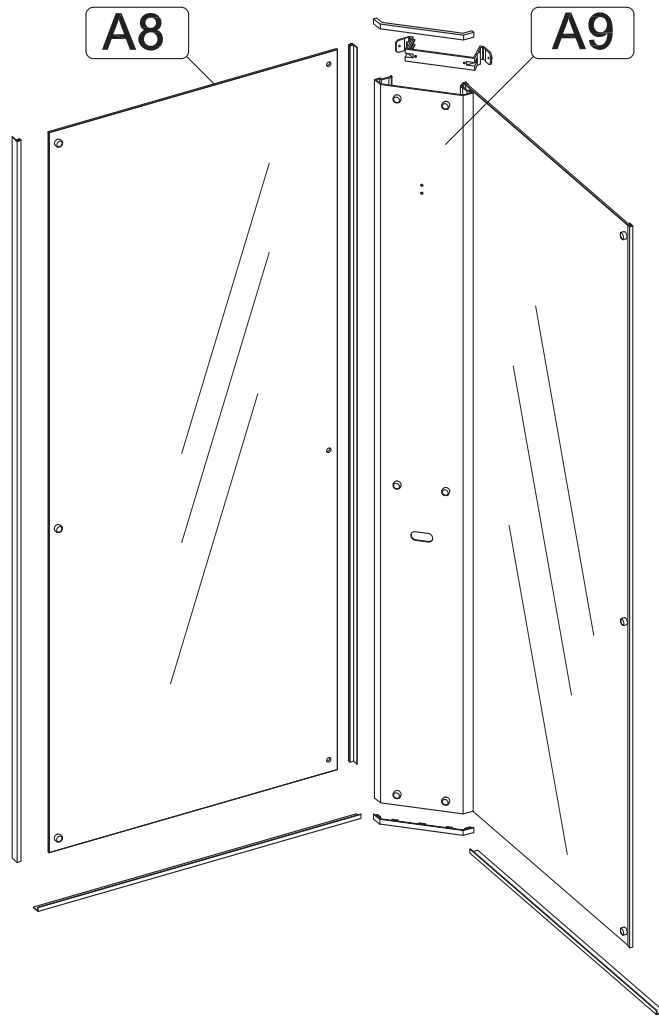

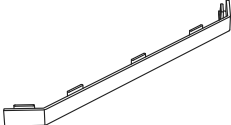
|   |  |  |  |   |
|---|--|--|--|---|
| <p><b>B19</b></p>  <p>x2</p>         | <p><b>B20</b></p>  <p>x2</p>        | <p><b>B21</b></p>  <p>x12</p>     | <p><b>B22</b></p>  <p>x12</p> | <p><b>B23</b></p>  <p>x6</p> |
| <p><b>B24</b> 3.5x19</p>  <p>x12</p> | <p><b>B25</b> 3.5x15</p>  <p>x6</p> | <p><b>B26</b> M3.5</p>  <p>x6</p> | <p><b>B27</b></p>  <p>x4</p>  | <p><b>B28</b></p>  <p>x3</p> |

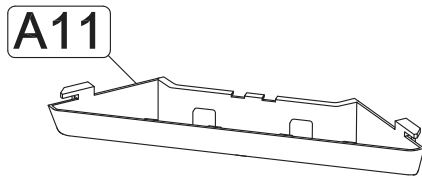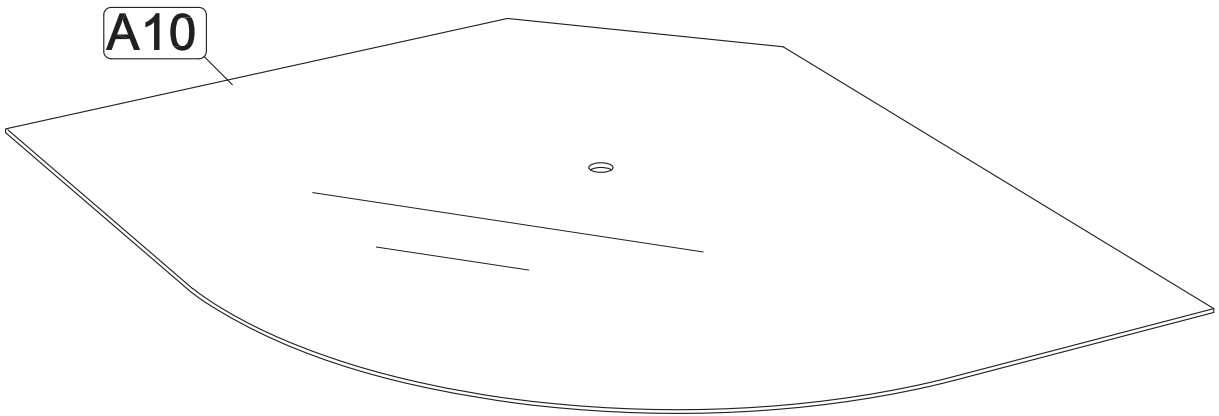

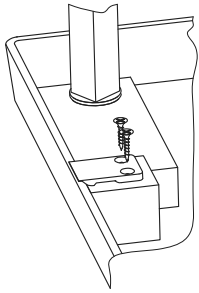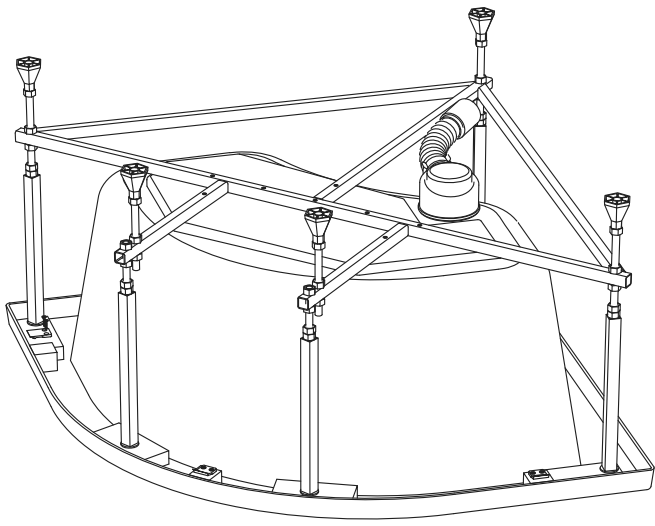


**B1**  
**B7**


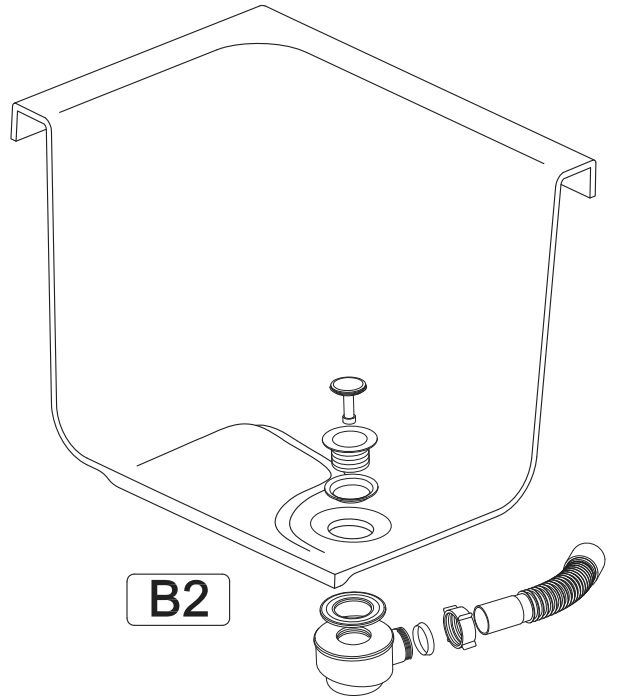







**B2**

**A6** **A2**

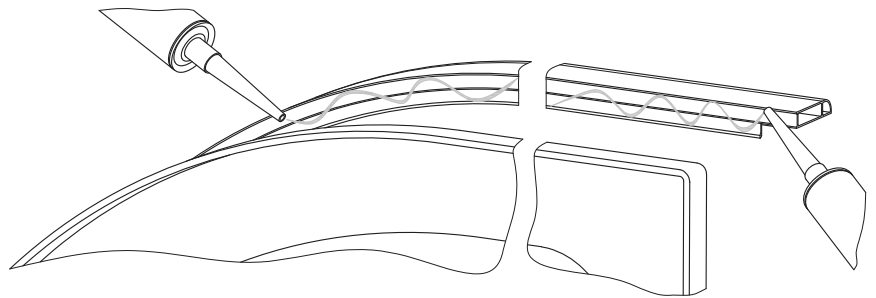


**B3**  
**B6**

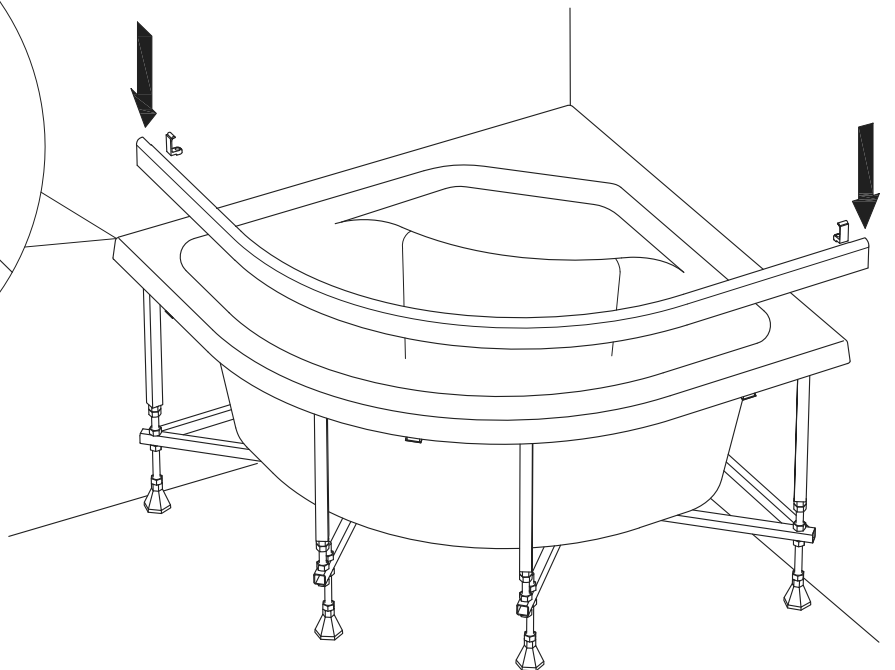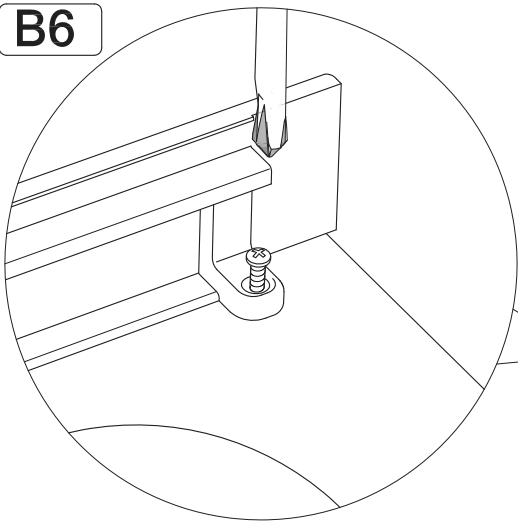

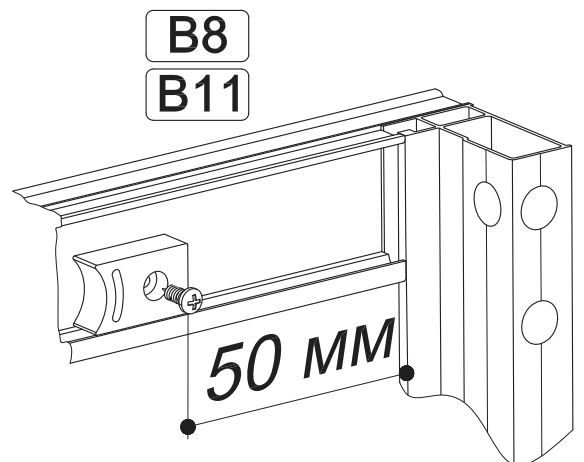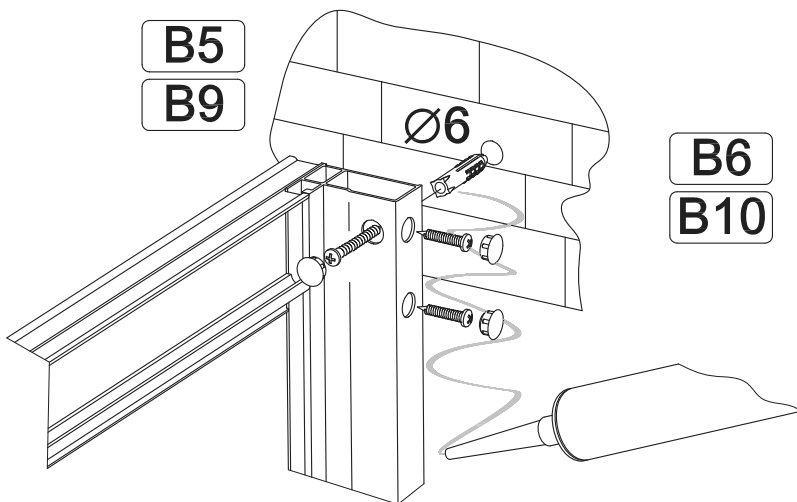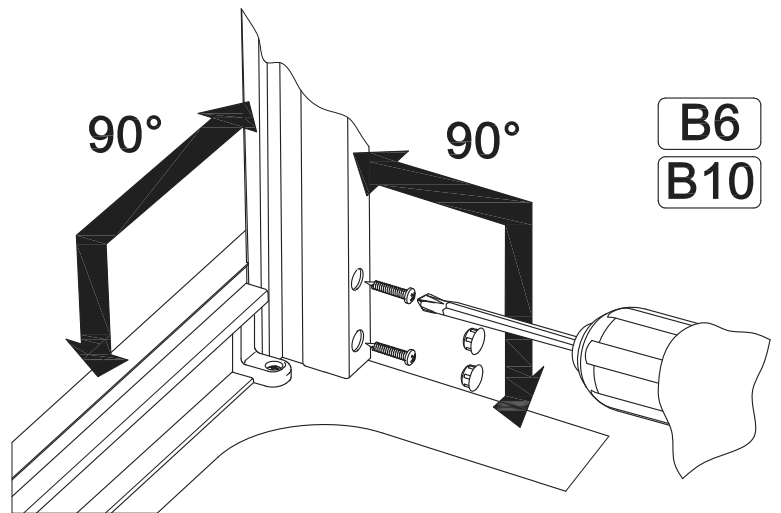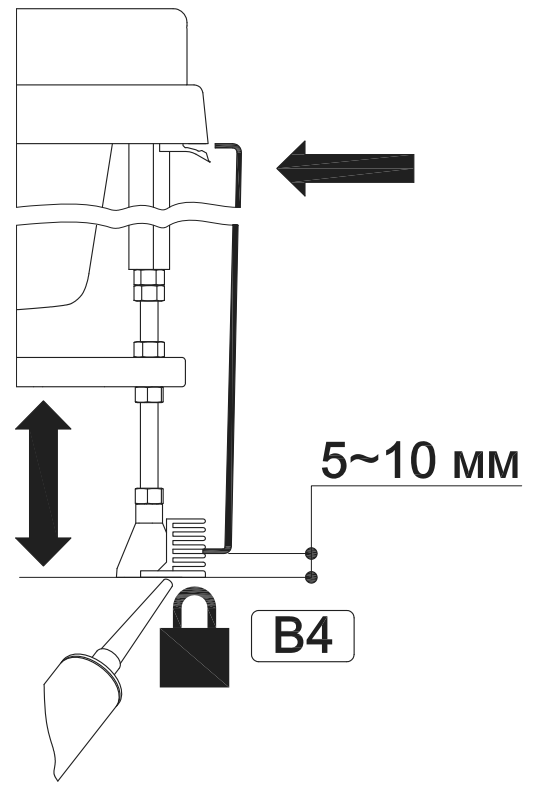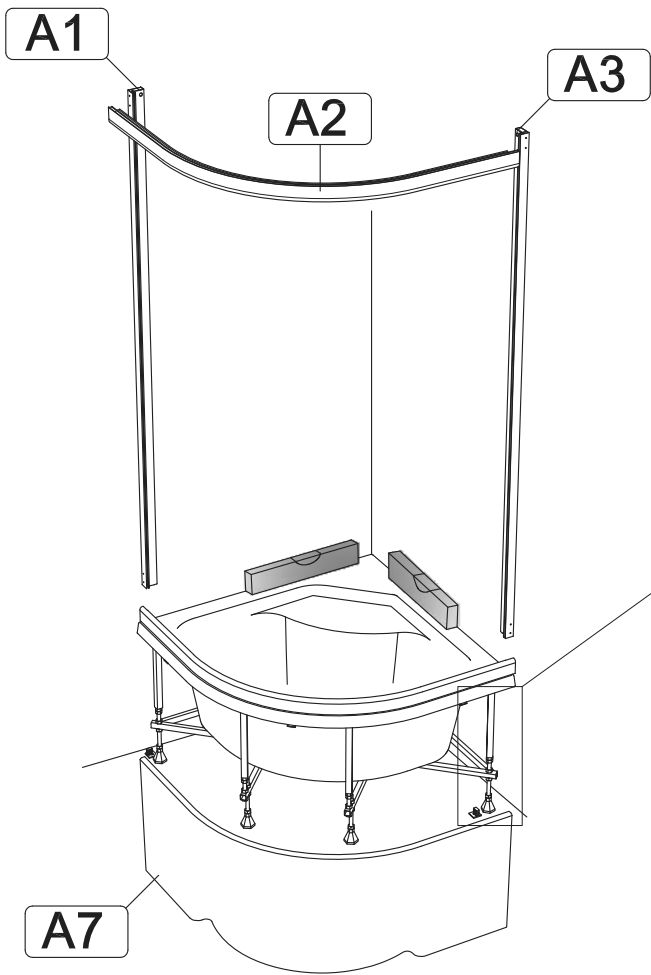



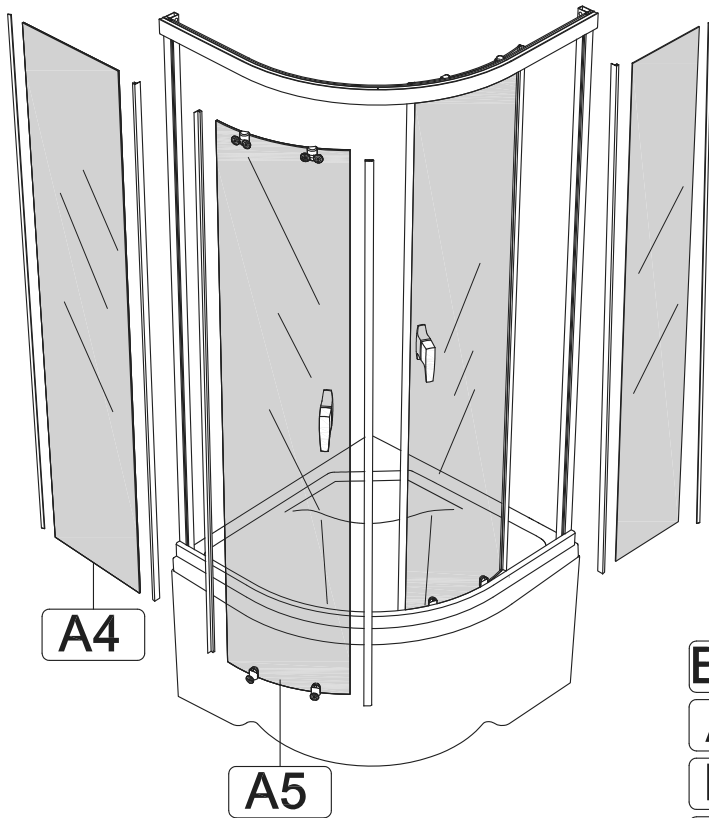


B16 ✂ L=1640



A4

B8

B12

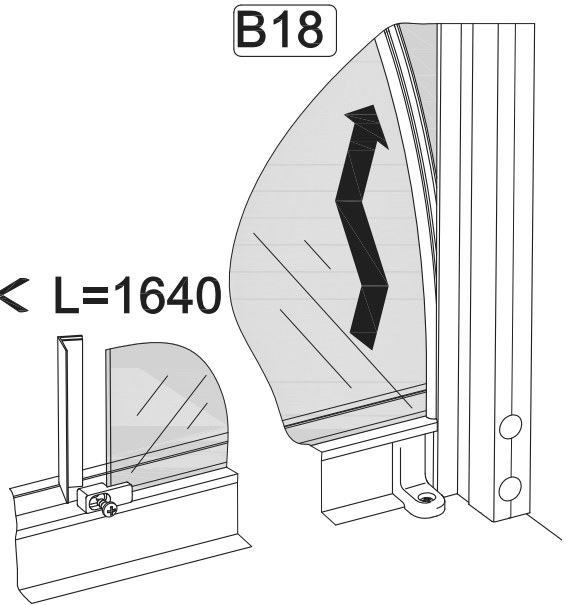

B16 ✂ L=1709

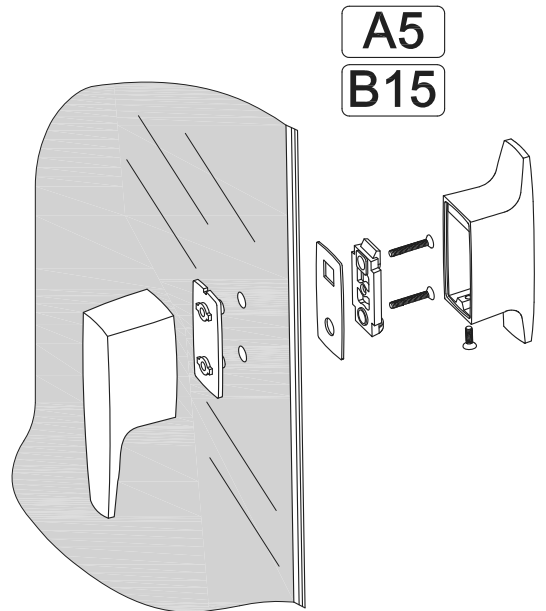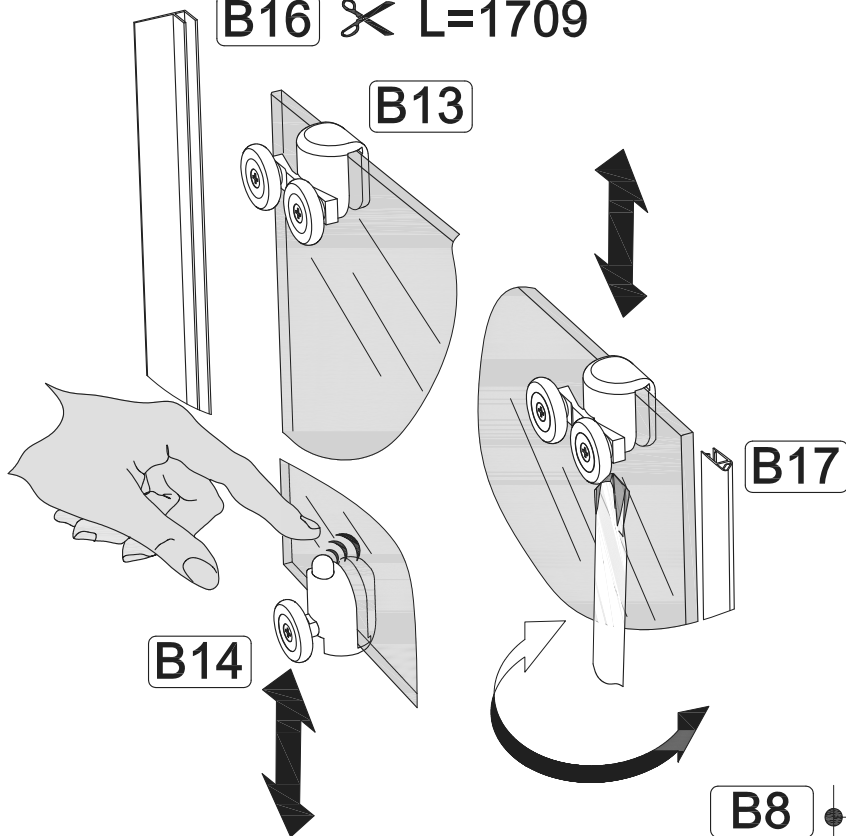

B8


1/2

1/2



B8

B11



B11


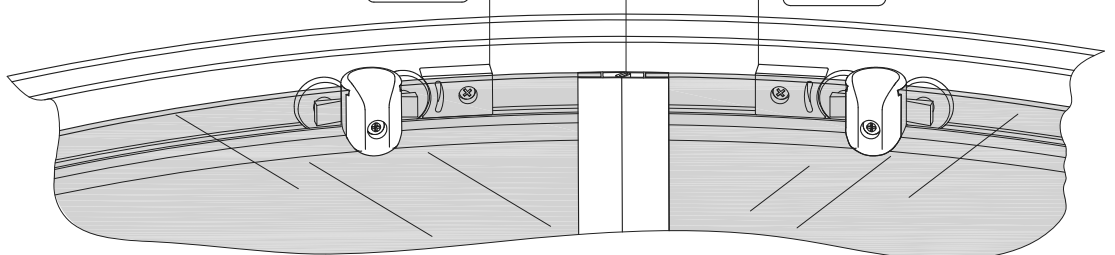


A8

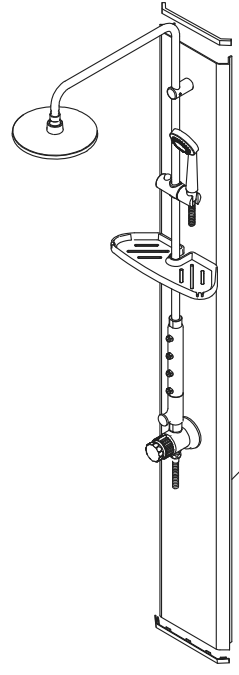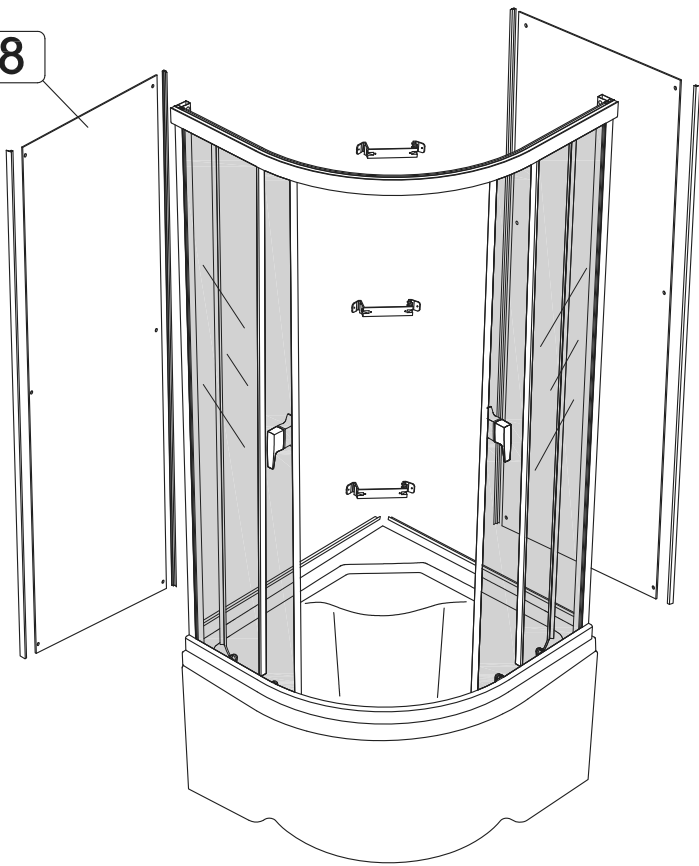

B19


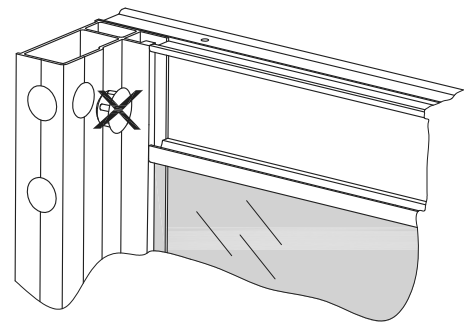
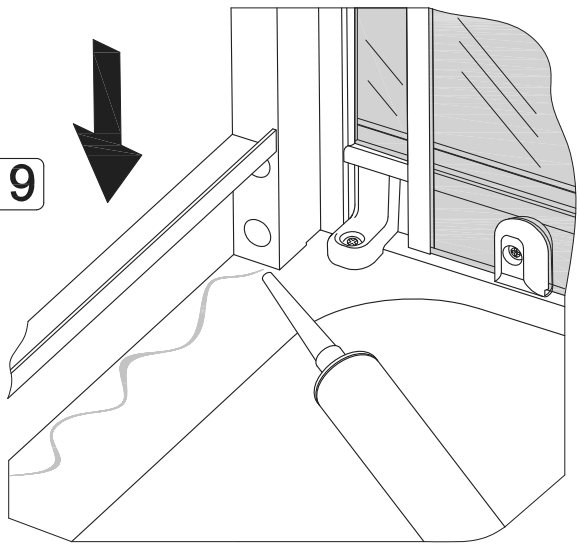


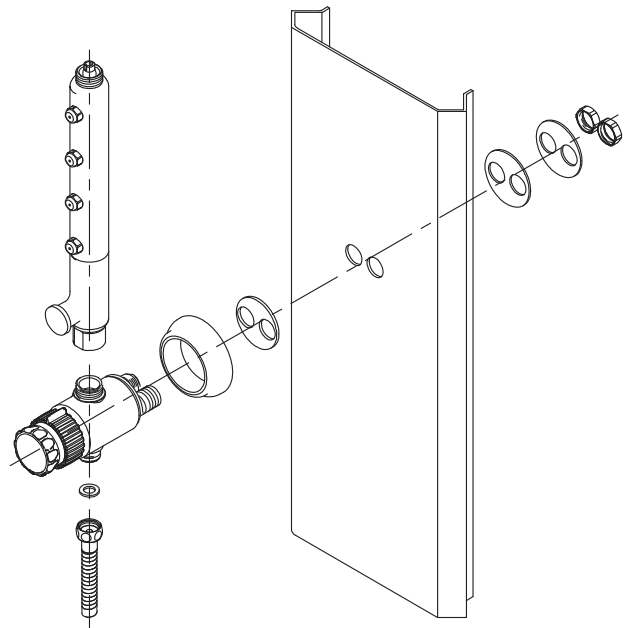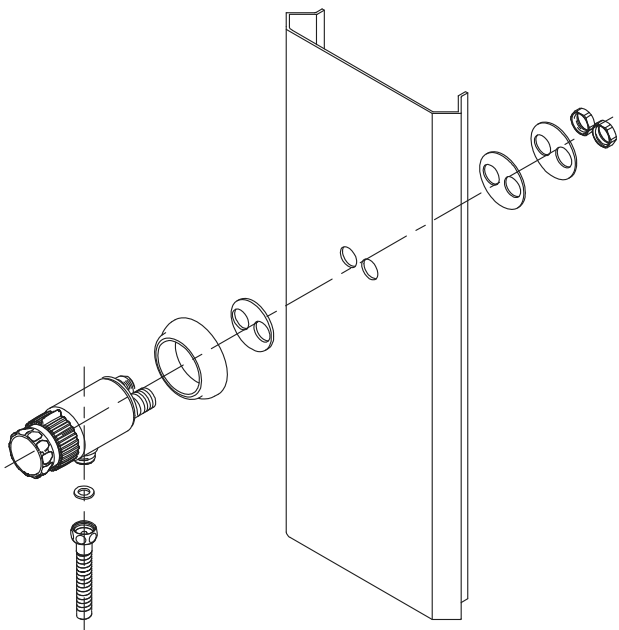

**ЭКО  
B3005**

**СТАНДАРТ  
B2005**

**ЛЮКС  
B2005M**

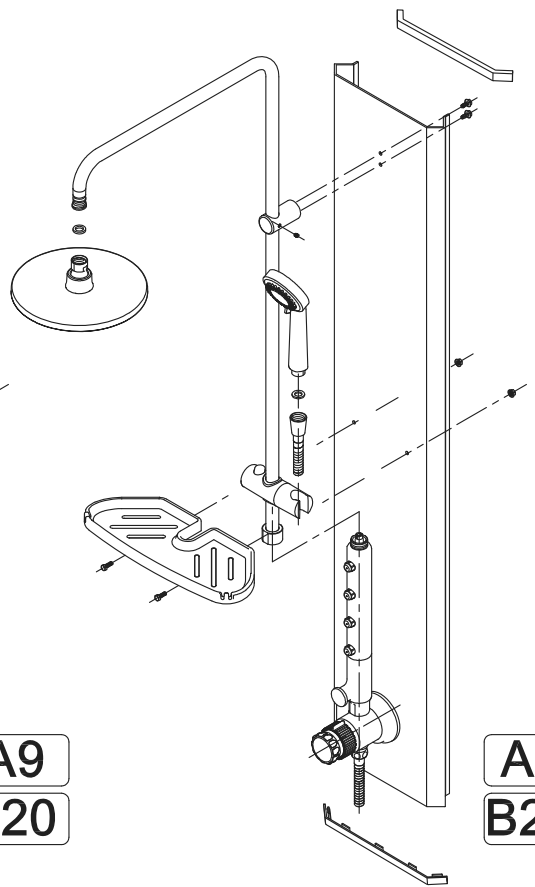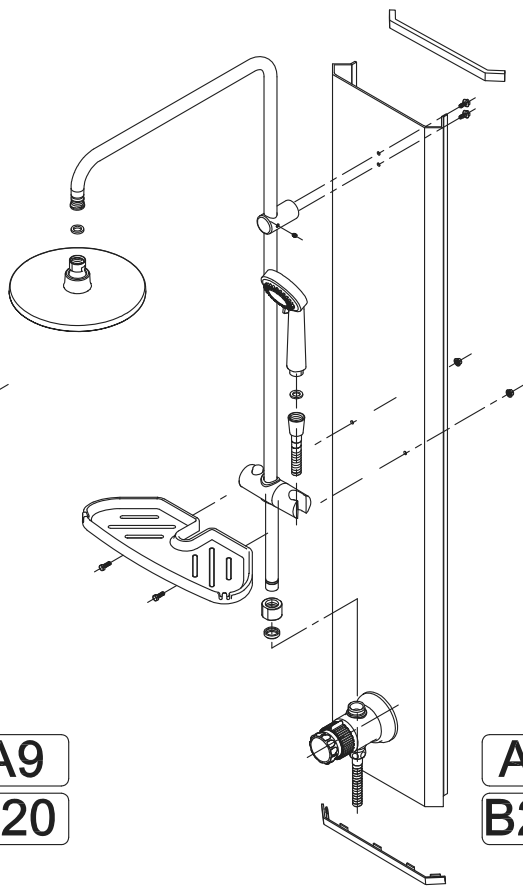
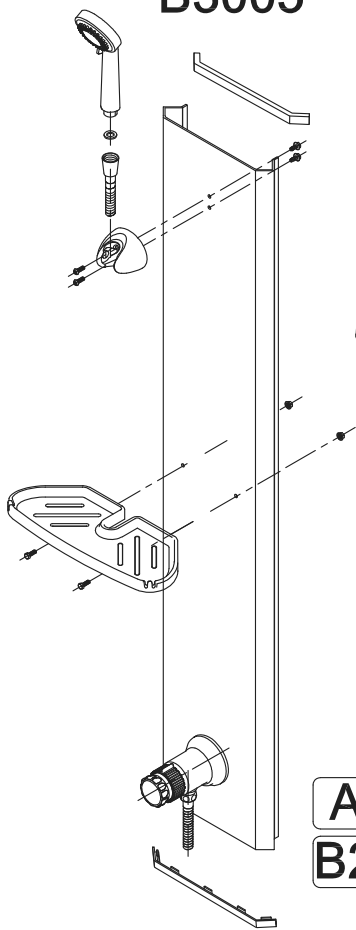


**A9  
B20**


**A9  
B20**

**A9  
B20**

A8

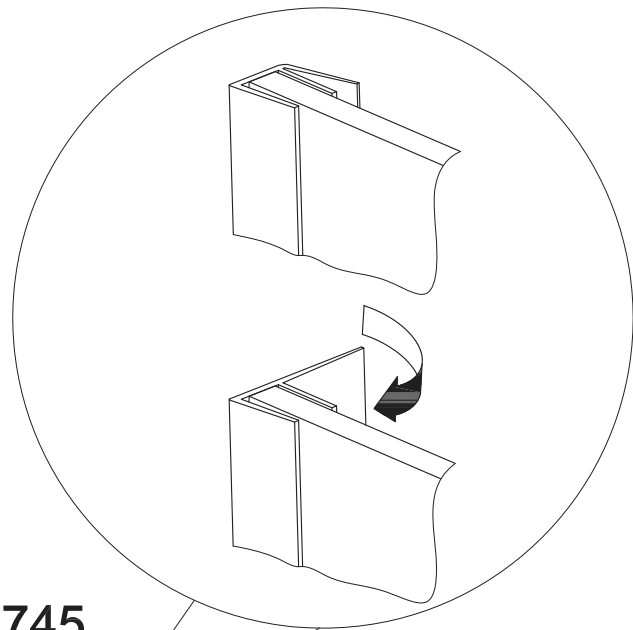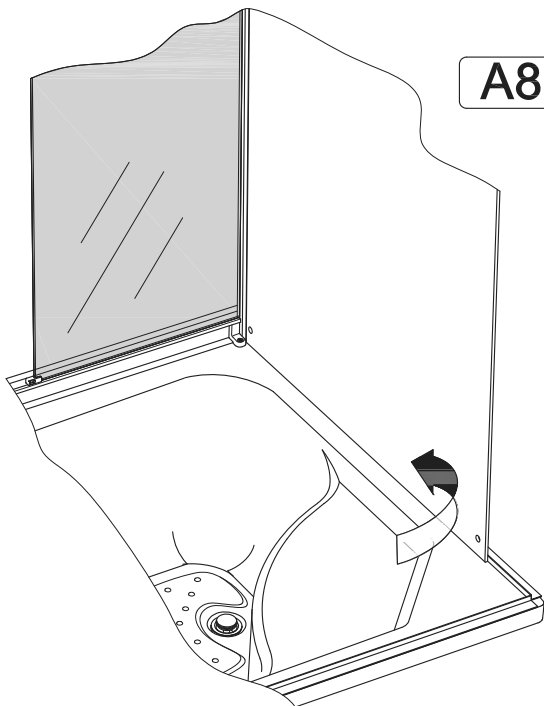


B27 ✂ L=1745

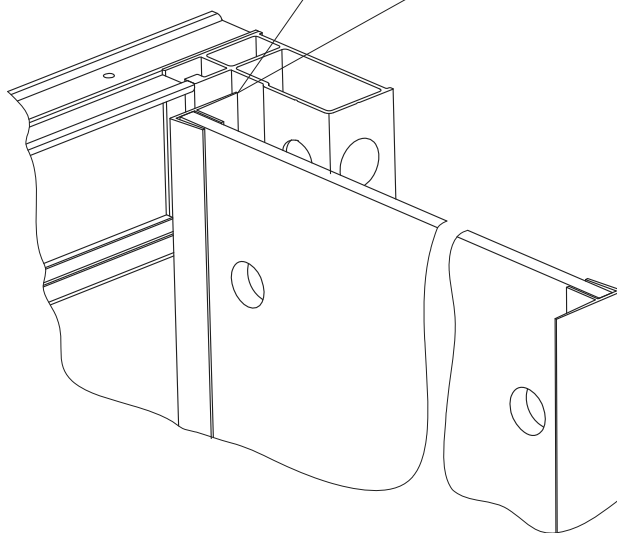

B21

B22

B24

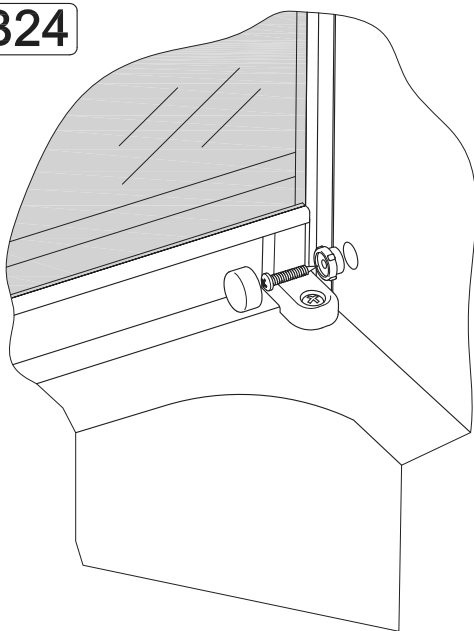


B27 ✂ L=1733





B22





B25

B26

B28

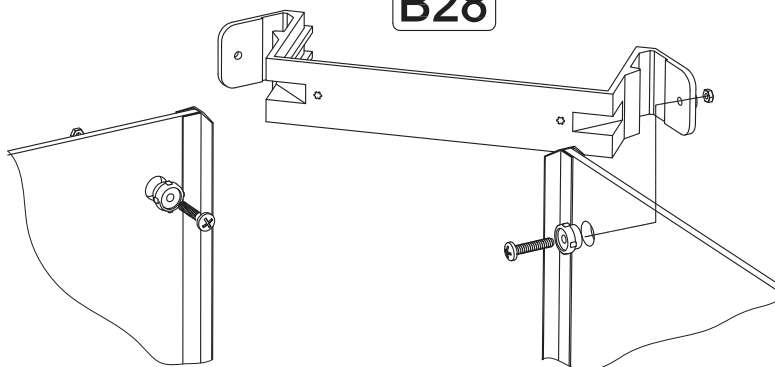

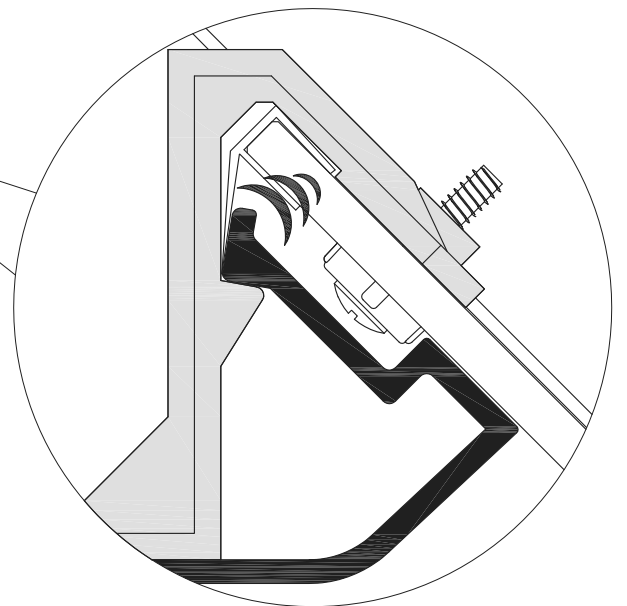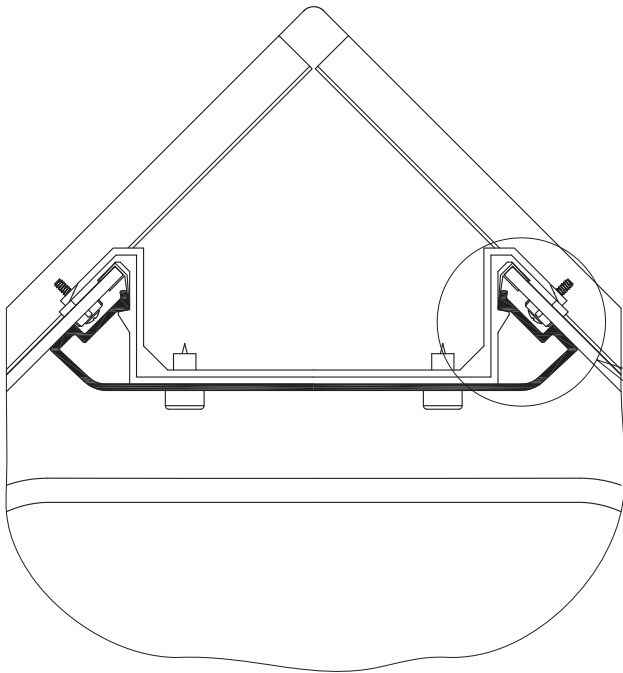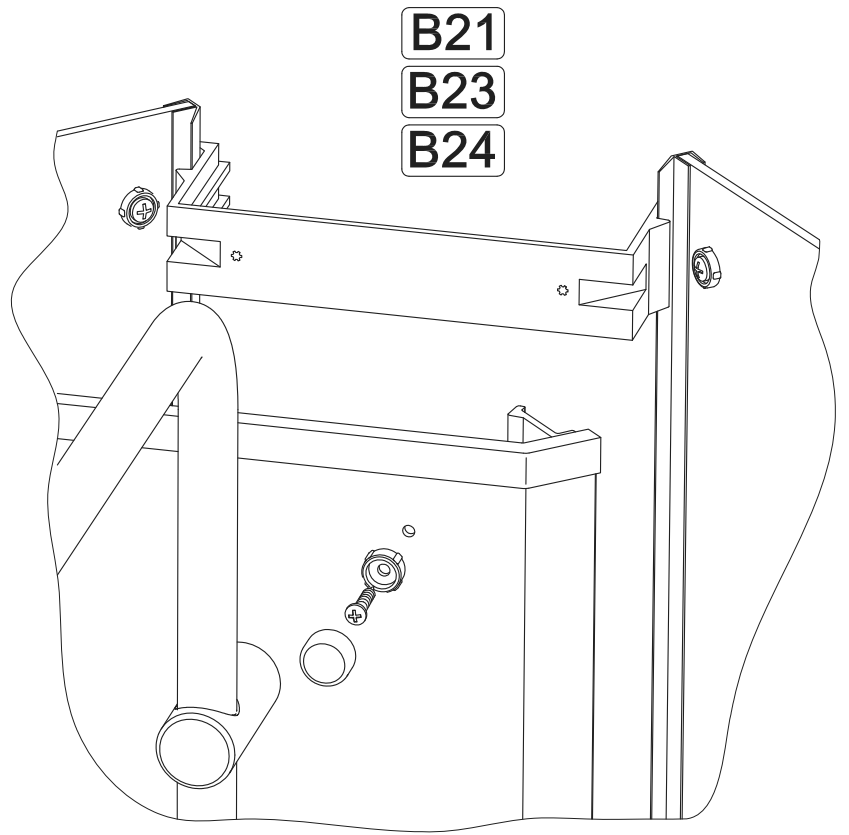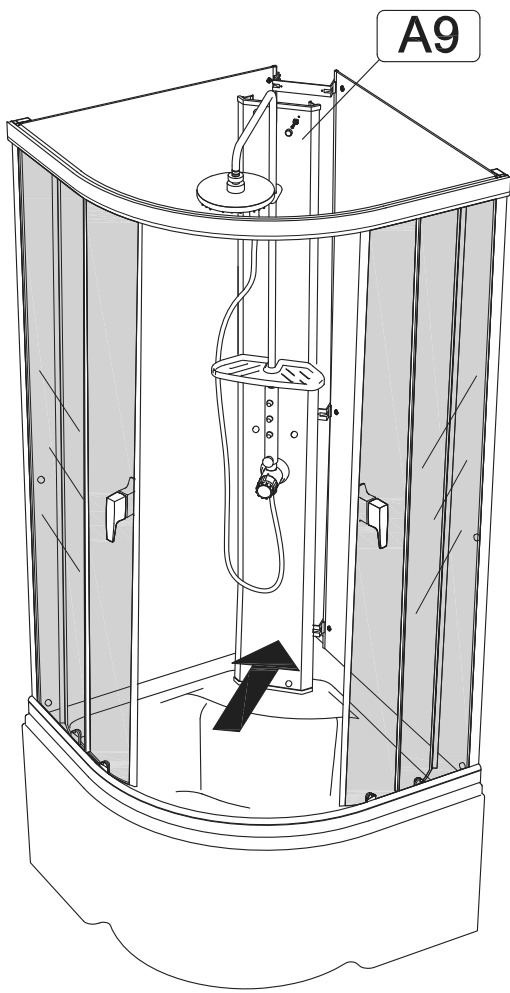

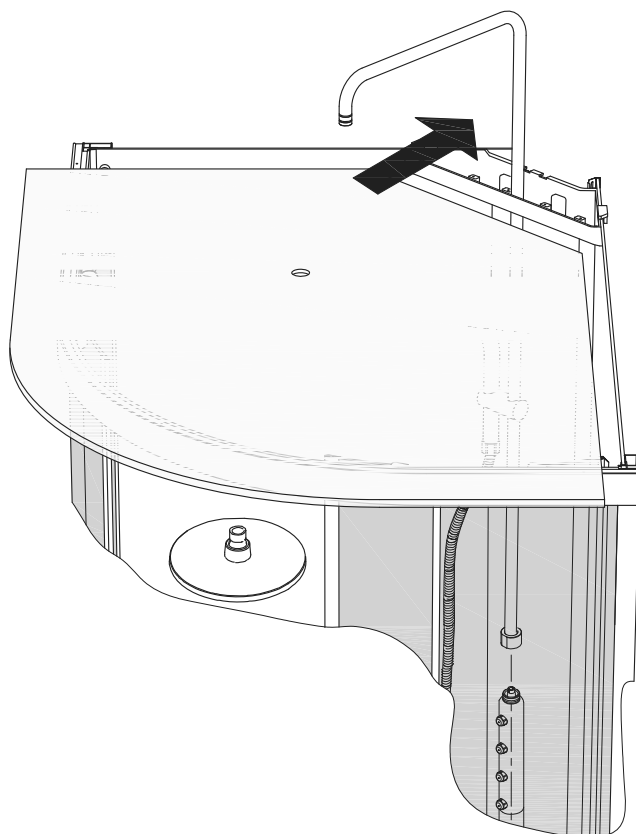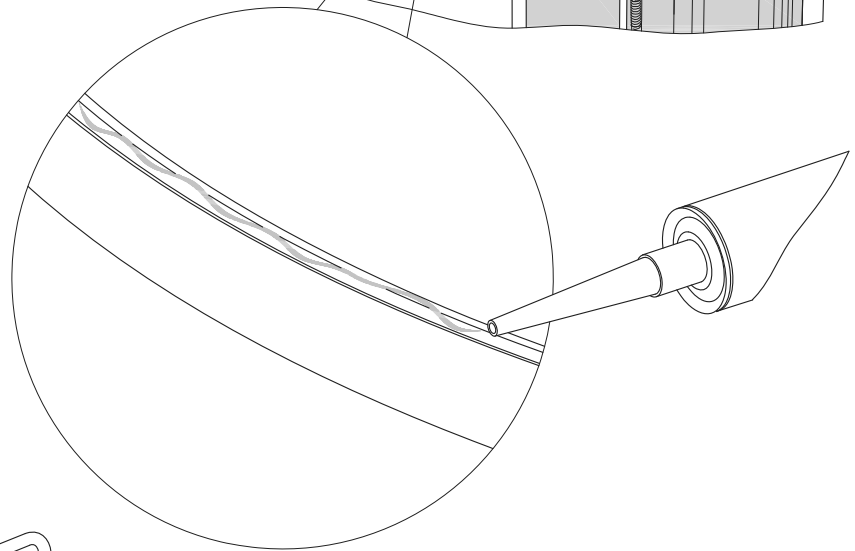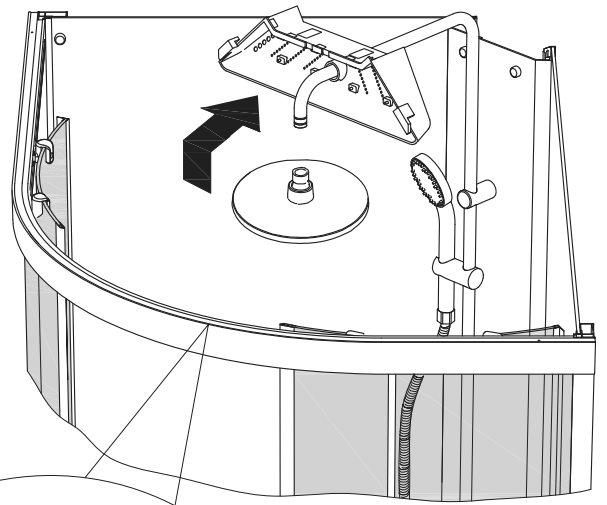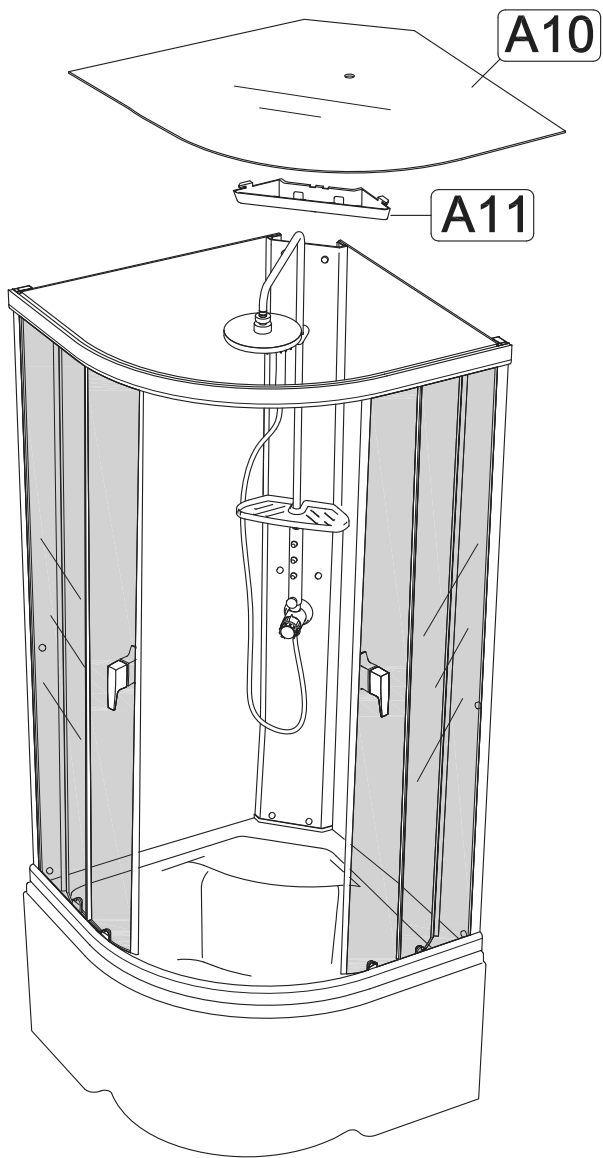



[www.3tn.ru](http://www.3tn.ru)